

# WIRELESS AMBER LED SOLAR CAB LIGHTS

SKU & P/N# 1007472



Tech Support: (847) 327-0073 Ext. 3

## INSTALLATION INSTRUCTIONS FOR FULL SIZE PICK UP TRUCKS

### TOOLS NEEDED:

- Isopropyl Solution
- Lint Free Cloth
- Measuring Tape
- Painters Tape
- Pencil

### 1. Clean Surface:

- Clean surface with isopropyl. Ensure surface is totally clean from oil, grease, wax and clear of debris. Failure to verify this may result in lamps not sticking to cab surface and thus voiding the warranty.
- Ideal indoor/outdoor temperature for application is between 60F-90F
- Wait 24 hours before exposing elements.

### 2. Measure & Mark: Use Pencil & Painter Tape To Mark Desired Lamp Locations

- All lamps to be located approximately 4.5" from windshield
- Position lamps where surface is clear of curvature and is flat.
- Use measuring tape to locate centerline of cab.

Use measuring tape to locate outer lamps approximately 4.5 inches from rain gutter and 4.5" from windshield just like centerline mark


### Decide on pattern A or B:

- A.** Measure and mark middle of centerline and outer lamps
- B.** Measure and mark desired locations


### 3. Peel & Place:

- Peel paper off of adhesive and place where marked.
- Apply adequate pressure for maximum adhesion.
- Power on device.

CAB LIGHTS ARE TYPICALLY INSTALLED IN ONE OF TWO PATTERNS:

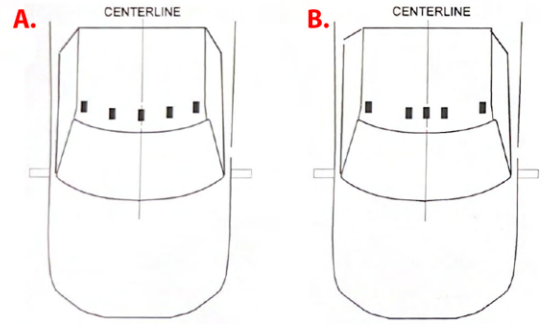

## ALL WEATHER

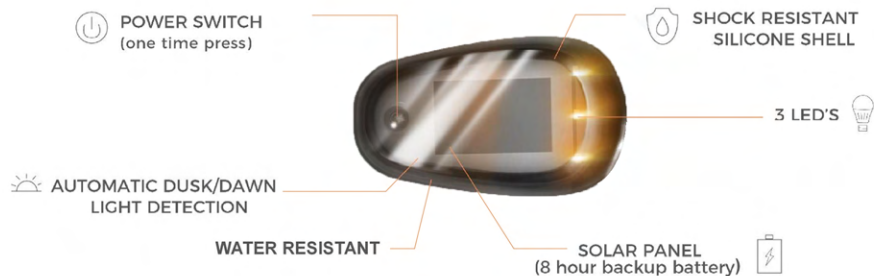

## OTHER POTENTIAL USES

- SUVs
- Golf Carts
- RVs
- Trailers

- Lights are intended to be installed only once
- 1-Year warranty
- Daily battery charge can vary based on availability to sun
- For removal, use a heat gun with soft tool