



## **Basic Install Instructions for SKU# RSPBBB40**



**Peterbilt Model 367, 389, and 379 Professional Grade Bumper Work Light Bar Kit - (1) 40in STEALTH Series Light Bar, (1) Pair of Custom Brackets, and (1) HD Series Wire Switch Harness - Direct Fit Complete Kit Model 367, 389, and 379**

1. Remove factory bolt from front bumper where the brackets go.
2. Grab corresponding bracket, angle side faces outer part of the vehicle, straight side faces inward.




3. Slide in longer bolt supplied for the 40" light bar in slot of the bracket as pictured below..



4. Using factory bolts from truck, attach through bracket with bolt wedged between the bumper and bracket.



5. Assemble the light bar with Universal L-brackets with supplied hardware.

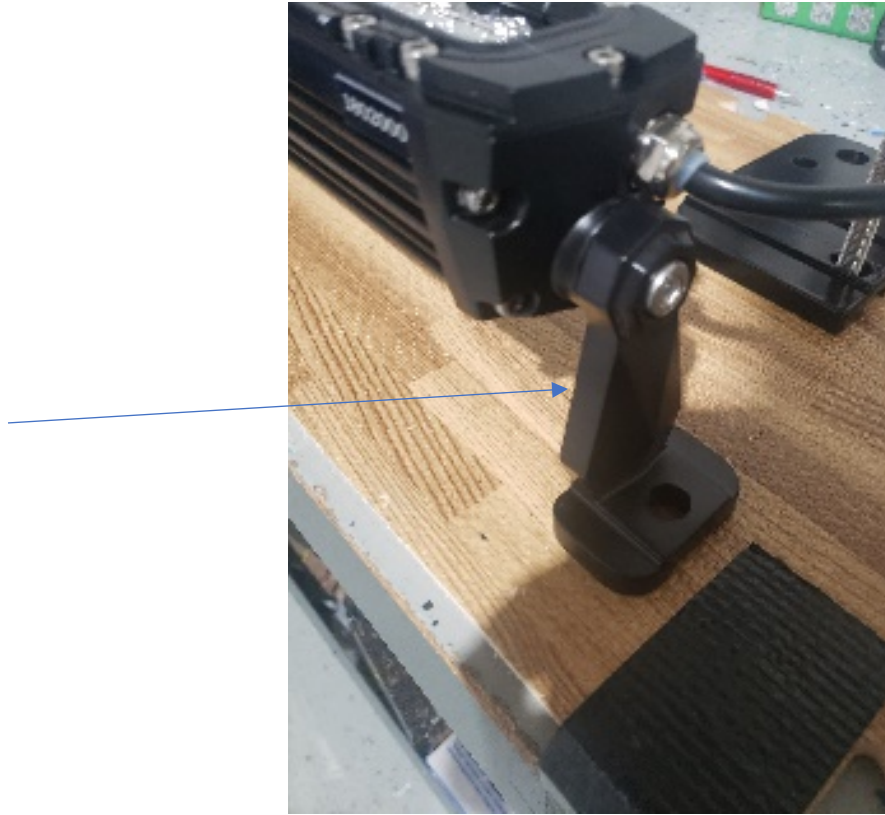

6. Align assembled light bar with bolts from bracket that is attached to bumper and assemble them with bolt washer supplied with kit. Once it is aligned secure and tighten all bolts and screws down.



7. Finally wire up the supplied relay harness in the kit for the light bar. The output of the harness in Plug-n-play to the light bar connector. Wire 12+ volt power and ground to the harness and mount the switch in the desired location. *You may need to extend the wires to the switch depending on your desired mounting location.*

If any questions or concerns, feel free to contact Tech Support @ 847-327-0073 ext. 3